

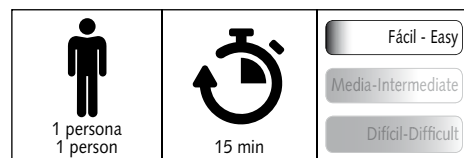


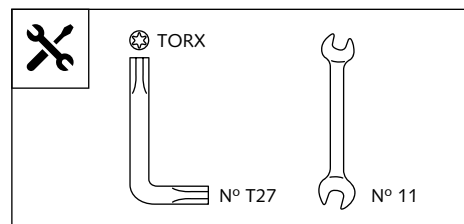

CÚPULA TOURING PARA - TOURING SCREEN FOR - TOURENSCHEIBE FÜR
KTM 1290 SUPERADVENTURE '17-

Ref.: 9717





ONLY FOR USA

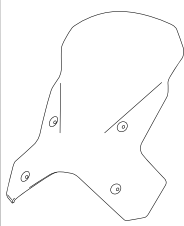

ID	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF.
1		Cúpula Touring	Touring screen	1	9717F/H/WM3
2		Tornillo especial M5x9 Long. Hexagonal 14	M5x9 special screw Hexagonal lenght 14	4	TORNI-EC----597
3		Arandela de goma Ø4,5 x Ø14 x 4	Ø4,5 x Ø14 x 4 rubber washer	4	ARAND-GD13D5X4-



CÚPULA TOURING PARA - TOURING SCREEN FOR - TOURENSCHEIBE FÜR
KTM 1290 SUPERADVENTURE '17-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

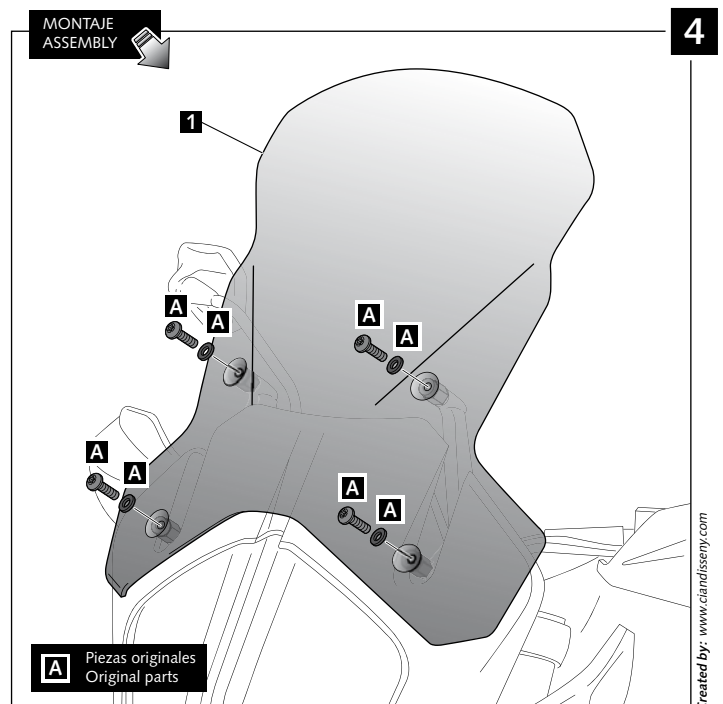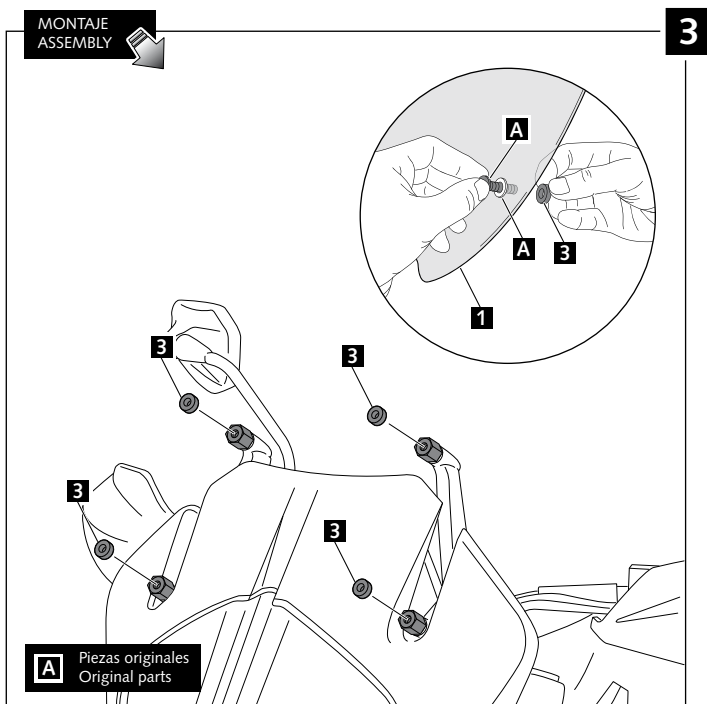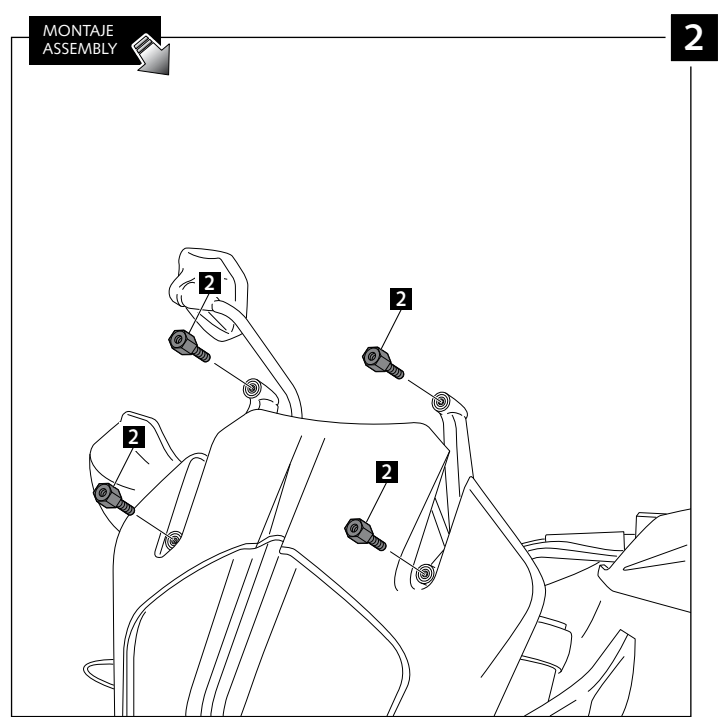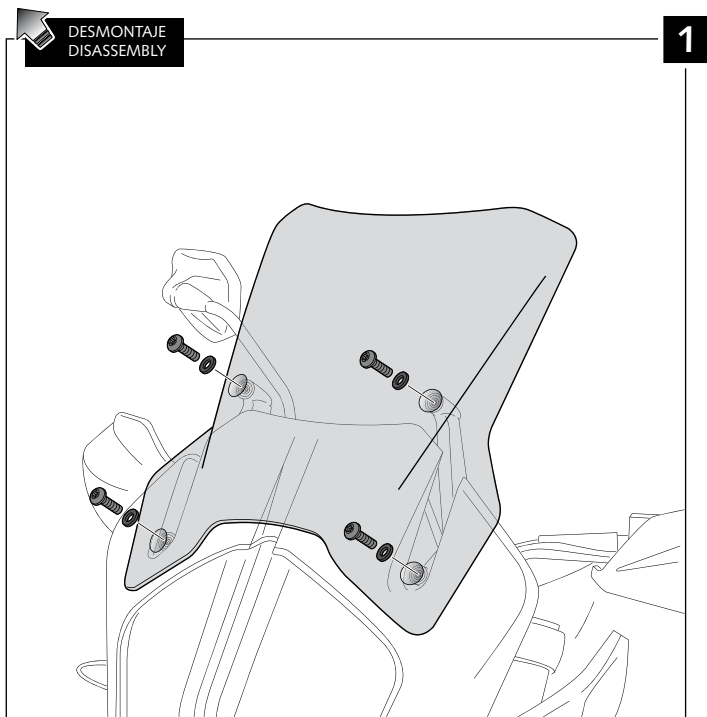

CÚPULA TOURING PARA - TOURING SCREEN FOR - TOURENSCHEIBE FÜR
KTM 1290 SUPER ADVENTURE R-S '17-





Ref.: 9717

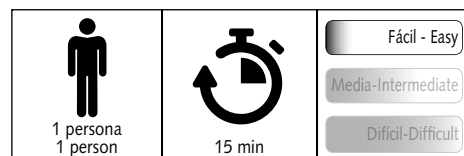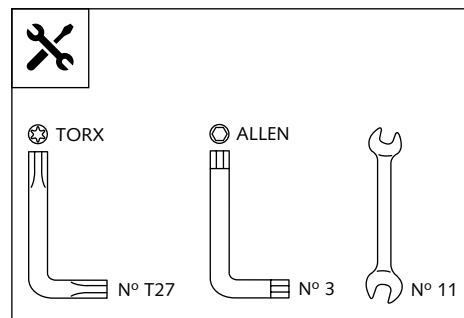

ID	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF.
1		Cúpula Touring	Touring screen	1	9717F/H/WM3
2		Tornillo especial M5x11 Long. Hexag. 15 (int M5x10)	M5x11 special screw Hexag. lenght 15 (int M5x10)	4	TORNI-EM5---781
3		Silentblock Ø18x Ø9 xØ11 x7,5	Ø18x Ø9 xØ11 x7,5 silentblock	4	SILENBGONE--064
4		Casquillo con valona Ø15x Ø9 x7,5	Ø15x Ø9 x7,5 bush with flange	4	CASQUI-1A---324
5		Tornillo M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 screw	4	TORNI-I7380-493
6		Arandela metálica M6 DIN 9021 (Ø6,4xØ18x1,6)	Metal washer M6 DIN 9021 (Ø6,4xØ18x1,6)	6	ARANDPD9021-037
7		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw cap	4	TAPON-----85

CÚPULA TOURING PARA - TOURING SCREEN FOR - TOURENSCHEIBE FÜR
KTM 1290 SUPER ADVENTURE R-S '17-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

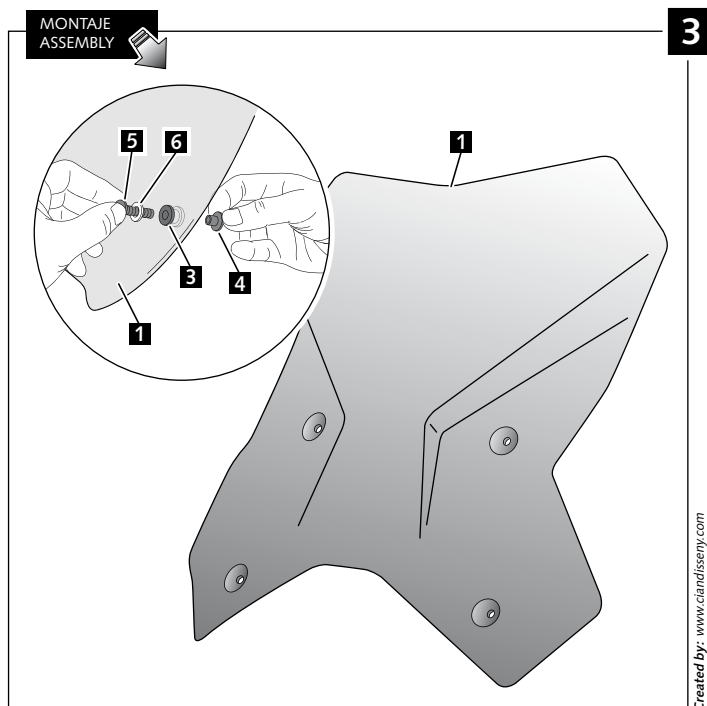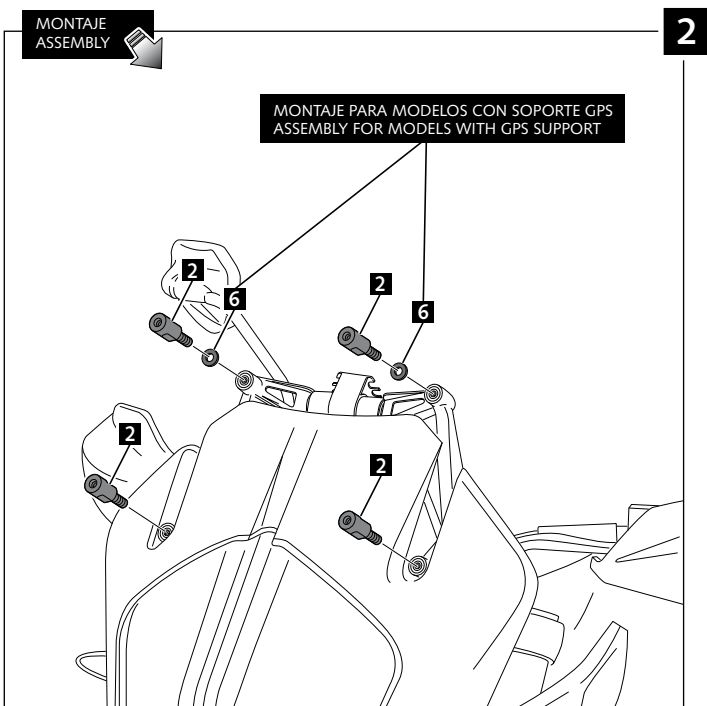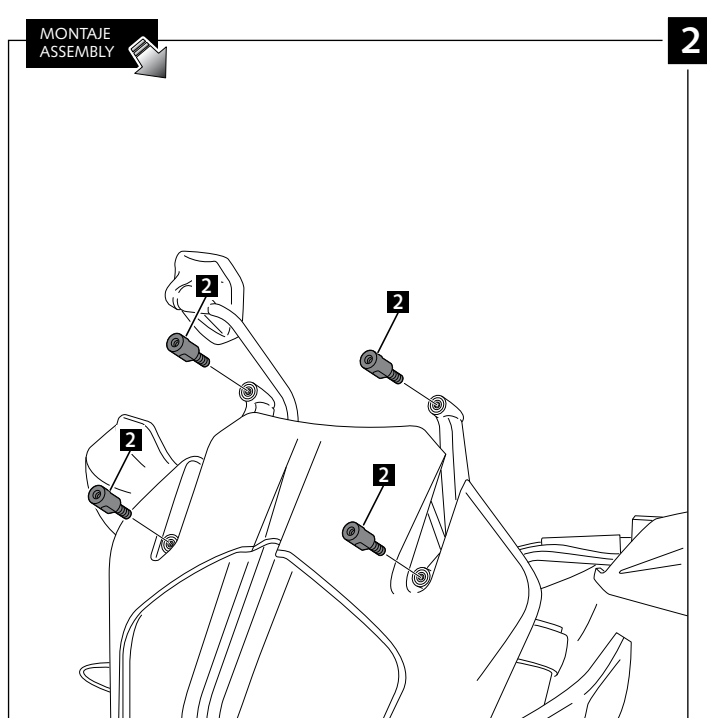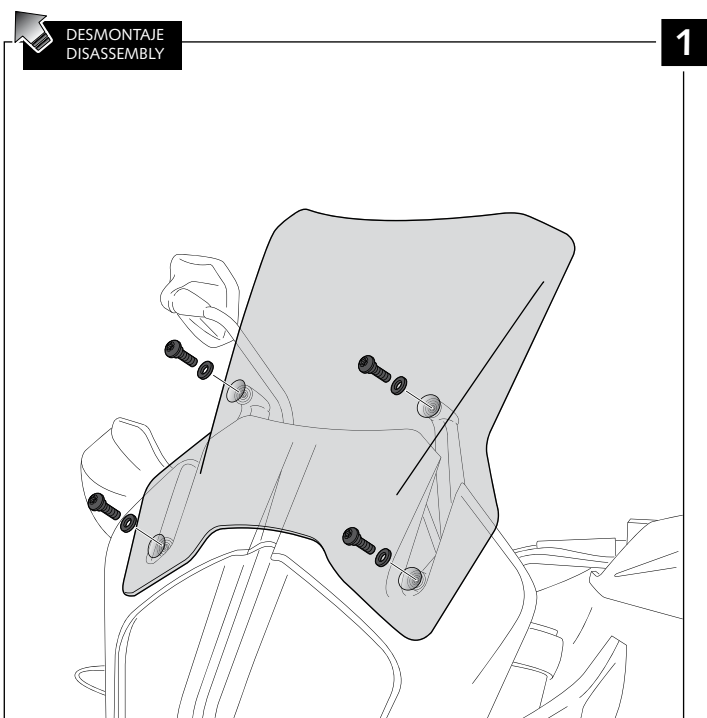

CÚPULA TOURING PARA - TOURING SCREEN FOR - TOURENSCHEIBE FÜR
KTM 1290 SUPER ADVENTURE R-S '17-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

